

Digital High Speed



MEMRECAM

Compact Flash Save

- **MEMRECAM fx Compact Flash Save**

NOTE: It is recommended that the desired range of frames is selected before the images are saved to Compact Flash media. This will allow for efficient use of the limited storage space available. The start and end frames of the selected range are identified by brackets which appear around the **Time** label in the upper right hand corner of the IBOX.

- 1) With the **MEMRECAM** fx camera on **READY** mode select the start frame by scrolling to the desired frame using the **REV STEP** key. Place the start frame bracket by holding down the **STOP** button and pressing the **REV STEP** key.



READY Mode – Set start frame

- 2) To select the end frame scroll to the desired frame using the **FWD STEP** key. Place the end frame bracket by holding down the **STOP** button and pressing the **FWD STEP** key.




READY Mode – Set start frame

- 3) To save the selected range into the Compact Flash card insert the card into the CF slot on the **MEMRECAM** fx camera. Press the **MENU** button to access the **TOP MENU**. Use the **UP/DOWN** keys to select the **CF save MENU** row and press the **RIGHT** key to enter the **CF save MENU** sub menu.



TOP MENU – CF save MENU

- 4) Notice that in the **CF save MENU** the **MEMRECAM** fx camera displays the available free space in the Compact Flash card in MB (Megabytes) and number of frames. Use the **UP/DOWN** keys to select the **MCFF SAVE** row and press the **SET** key to begin recording to the Compact Flash card.

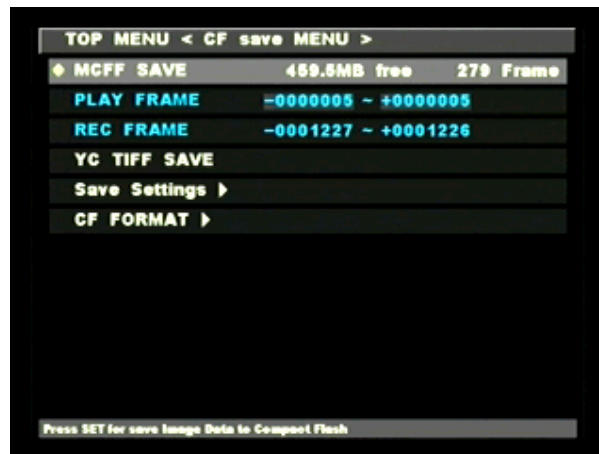

CF save MENU – MCFF SAVE

- 5) Please wait while the **MEMRECAM** fx camera records the data to Compact Flash.



CF save MENU – Saving

- 6) Press the **STOP** button to return to **READY** mode after the **MEMRECAM** fx camera is finished recording to the Compact Flash card. The Compact Flash card is now ready to be removed from the CF slot on the **MEMRECAM** fx.

Rear Camera Control Touch Pad

The Rear Camera Control Touch Pad is located on the top of the **MEMRECAM** fx DRP rear panel. There are 12 keys and 8 LED as follows:



Camera Control Touch Pad

■ Setup Mode keys



LEFT/RIGHT keys (arrow keys)



UP/DOWN keys (arrow keys)



MENU key



SET key

■ Setup Mode keys



STOP key



PLAY key



REV STEP key



FWD STEP key



VIEW / ARM key



TRIGGER key